

METAL  
PANELS  
INC.


TM

# StrongSeam SL175 Panel

STRONGSEAM<sup>TM</sup>  
PANELS

## Installation Manual

Apr 2022

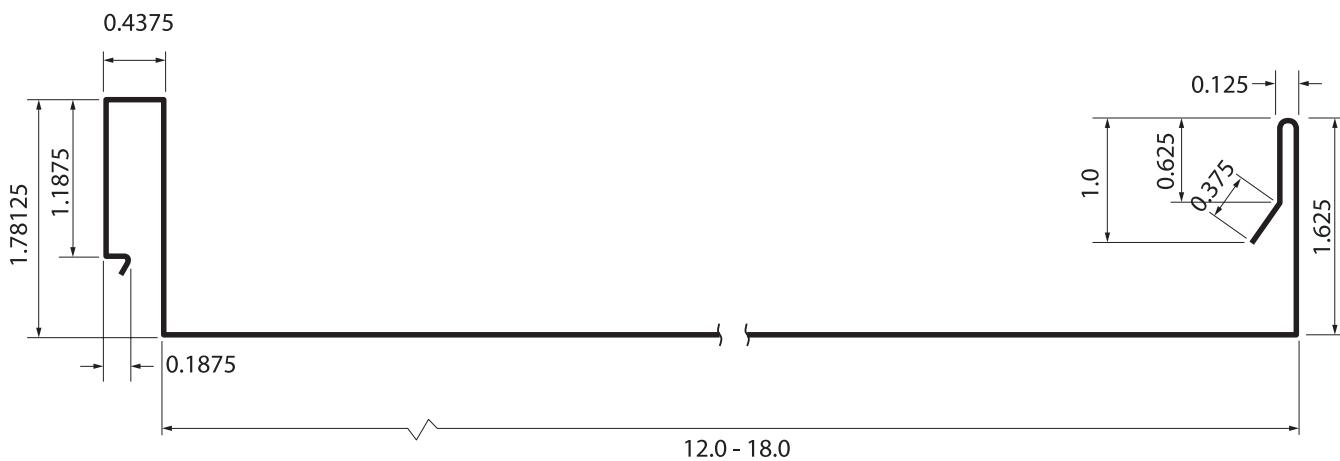



# Design Guidelines

This manual contains guidelines for installing Metal Panels Inc. (MPI) panels and trim. Guidelines presented herein were in effect as of this printing. Metal Panels Inc. reserves the right to change designs or specifications at any time in order to stay current with building code requirements. To ensure that you have the latest information, please contact your sales representative at Metal Panels Inc. Application and design illustrations are for your reference only, and may not be appropriate or specified for all environments, conditions or building designs. It is strongly recommended that all projects should be engineered and installed to conform to applicable building codes, regulations and accepted industry practices.

A roof must be designed to support certain minimum wind and snow loads. Consult local building officials to determine appropriate design load requirements. All roof systems should be designed or verified by a qualified engineer. It is the buyer's responsibility to verify all code requirements, checking all measurements, and determine suitability of the product for the job. The buyer is responsible for supplying and confirming all panels and trim profiles, and actual length and quantities needed. All MPI instructions for this panel assume that a qualified firm or individual has been contracted to install this product. Failure to comply with stated recommendations voids all manufacturer responsibility for any damage or deterioration due to misuse of the product and voids any applicable warranty.

## NOTICE

Please read all instructions before beginning installation. All panels should be inspected upon receipt for order accuracy and for any material defects that could contribute to installation failure. Any such defects must be brought to the attention of the manufacturer immediately upon discovery and/or before installation for warranty purposes.

Metal Panels Inc. does not accept responsibility for job failure resulting from or associated with site conditions and installation failure due to improper installation, and shall not be held responsible for installation actions taken or not taken.

# TABLE OF CONTENTS

SL175 Panel Profile .....	1
Design Guidelines .....	2
Table of Contents .....	3
Introduction to Installation .....	4
Storage & Handling .....	6
Design & Installation .....	11
Standard Trim .....	13
Accessories .....	14
Preliminary Installation Guide .....	15
General Installation Overview .....	17
Trim Installation Overview .....	21
Visual Guide: Drip Edge .....	21
Visual Guide: Rake Trim .....	22
Visual Guide: Sidewall Trim .....	23
Visual Guide: Endwall Trim .....	24
Visual Guide: Valley .....	25
Visual Guide: Pitch Change .....	26
Visual Guide: Ridge Cap .....	27
Visual Guide: Vented Ridge Cap .....	28
Visual Guide: High Side Eave Trim .....	29
Visual Guide: Pipe Penetration .....	30
Visual Guide: Square Penetration .....	31
Contact MPI .....	38

# INTRODUCTION TO INSTALLATION

## Introduction


The SL175 Panel is a snap-together architectural panel with a 1 $\frac{3}{4}$ " standing seam typically used over a solid deck, but can be used over open purlins.

## Specifications

The StrongSeam SL175 Panel is available in both 26 ga. WeatherXL and 24 ga. Kynar with widths ranging from 12" to 18". MPI stocks 19 colors for 16" wide panels in 26 ga. WeatherXL. Minimum recommended slope is 2:12. Panel striations are required for all 26 ga. panels.

Maximum panel lengths are constrained only by practical handling and transportation limitations, typically a maximum of 55 ft. Panels exceeding 55 ft. will be roll-formed at the jobsite.

fig. 1

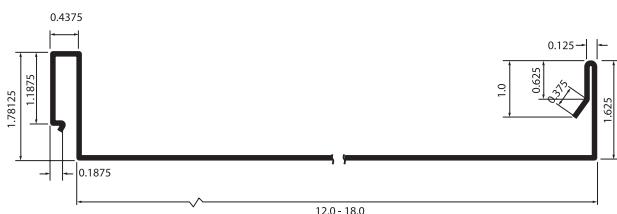

## Testing

UL90 #169 Uplift Rating

UL2218 Class IV/Impact Resistance

UL790 Class A/Fire Resistance

## Recommended Tools

- Cordless Screw Gun
- Snips
- Tape Measure
- Electric Metal Shear or Circular Saw
- Caulk Gun
- Pop Rivet Tool
- Chalk Line
- "Duckbill" Locking Pliers
- Hemming Tool
- Electrical Extension Cord

Installer must have experience using the tools listed above for metal roofing installation.

## Safety

Use extreme caution when walking on a metal roof. Metal panels may become slippery, so always wear shoes with non-slip soles. Avoid working on metal roofs during wet conditions. Do not walk on a metal roof which does not have a solid deck beneath it. If you must, walk on the purlins only. Always use appropriate safety harnesses. OSHA safety regulations should be complied with at all times.



**Caution**



*Always wear heavy gloves when working with steel panels to avoid cuts from sharp edges. When power cutting or drilling steel panels, always wear safety glasses to prevent eye injury from flying debris.*



## Production Lead Time

Please consult your MPI sales representative for accurate order production time. Large orders, non-standard colors or custom panel fabrication may require longer lead times.

## Packaging

For standard orders, panels are crated for truck shipment. Custom shipping requirements may be accommodated at an additional charge.



(Illustration to demonstrate packaging methods only.)



# STORAGE & HANDLING

## Storage

When metal panels will NOT be used immediately, store inside in a well-ventilated, dry location. **Outdoor storage is not recommended and may void warranties; to do so is at the customer's own risk.**

Standing Seam panels are shipped with a plastic peel-off protective film, which should be removed shortly after taking receipt of the panels. **Panels left in the sun, or stored for an extended amount of time may cause the protective film to permanently bond to the panel paint.** Extended storage of crated panels is not recommended.

Panels must not be stored near or come in contact with salt water, corrosive chemicals, ash, or solvent fumes, or come in contact with wet or green lumber.

If panel crates must be stored outside, strictly adhere to these requirements:

1. Storage area should be level, and should be located to minimize handling of crate during construction.
2. For storage on bare ground, place a plastic ground cover as a barrier under the crate to minimize exposure to moisture, dirt or dust from the soil.
3. Store crate above the ground by a minimum of 6" to allow air circulation beneath the crate, and to prevent damage from rising water.
4. Inspect stored crate frequently and repair any tears or punctures in the water-resistant cover with a compatible waterproof tape.
5. Re-cover opened crate at the end of each day to prevent entry of moisture and exposure to sunlight.

# STORAGE & HANDLING

## Protective Film Removal

Painted panels may have a protective film layer applied to the outside finish to prevent possible damage to the painted surface. **Remove the protective film layer promptly, before exposing to direct sunlight and high temperatures.** After exposure to heat or sunlight, the protective film **cannot be removed.** Never leave the protective film on the panels after installation. Metal Panels Inc. cannot be held liable for damage to metal caused by improper storage and failure to remove protective film.

## Some Safety Precautions


To prevent injury, always wear gloves when working with steel panels. Wear safety glasses when cutting or drilling steel panels, and remove any metal shavings immediately to reduce risk of eye injury from flying debris. Avoid walking on metal panels. If you must walk on a metal roof, use extreme caution. Wear shoes with non-slip soles, for metal panels can become slippery even dry. Avoid working on metal roofs during wet conditions when the panels can become extremely slick. Walking or standing on a metal roof which does not have a solid deck beneath it is not recommended. If unavoidable, always walk on the purlins, never between. Do not for any reason walk on a roof made of material thinner than 29 gauge.

## Roof Storage

For convenient handling, MPI SL175 panel crates can be lifted and placed on the roof. When lifting crated sheets, make sure they are adequately supported. Panels less than 20 ft. in length may be lifted with a forklift. When lifting crated panels in excess of 20 ft., it is recommended that a spreader bar with slings be used, or use two forklifts. When lifting, do not leave more than 1/3rd of the panel length unsupported. (See fig. 2)

Determine best location for crate placement by how much area that crate of panels will cover. Crates should be placed on the roof facing the same direction that the panels will be installed. Make certain to keep the area clear for your markings and string lines that verify squareness of roof.

Fig. 2

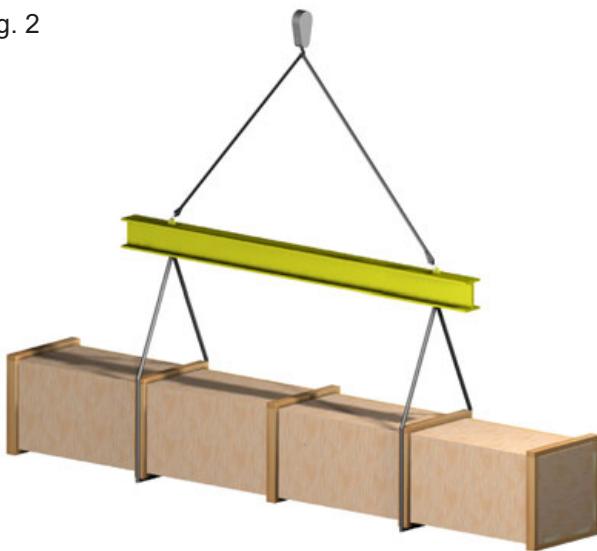

# STORAGE & HANDLING

## Receiving Materials

The installer has the responsibility to unload material from the delivery truck. The installer must provide suitable equipment for safely unloading all materials from the delivery truck. Optionally, MPI offers donkey/forklift truck delivery and off-load.

After receiving your order, verify the condition of the material and compare the shipment against the shipping list to ensure all ordered items have been received. If damages or shortages are discovered, note the discrepancy on the shipping copy at time of delivery. If replacement material is required, you must contact Metal Panels Inc. to place the order. Report any damages or shortages to Metal Panels Inc. within 48 hours from the time of shipment.

### Caution


*Improper loading and unloading of crate may result in bodily harm and/or material damage. Metal Panels Inc. is not responsible for bodily injuries and/or material damages resulting from improper loading or unloading.*

## General Handling

Each crate should be handled with care to avoid product damage. Proper handling should be used to prevent bending panels or scratching the finish. To prevent panel damage, follow these steps for unloading and handling crate:

1. Crate should remain unopened and intact during any handling and remain so until the panels are ready to be installed.
2. Always lift crate as close as possible to its center of gravity
3. When lifting by crane, use a spreader bar of appropriate length and nylon band slings. (Do not use cable slings. They will damage panels.)
4. A panel crate of manageable length may be lifted by forklift. Set forklift forks to their maximum spacing apart, and center the load on the forks to prevent panel damage. Never lift a panel by its ends. Carry a panel by its longitudinal edge and in a vertical (not flat) position. For panels over 10 ft., two or more people should lift and carry the panel from the same edge. (see fig. 3)
5. Once a crate is opened, individual panels must be handled with care to prevent panel buckling or finish damage.
6. Gloves must always be worn when handling panels.

fig. 3

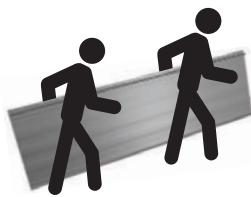

# STORAGE & HANDLING

## Mechanical Handling

### Using a Forklift

A forklift may be used for panels up to 20 ft. Set the forks at their maximum separation and center the load on the forks. When transporting crate across rough terrain, or over a long distance, use nylon straps or similar means of additional support for the crate. Never transport open crate.

### Using a Crane

For lifting panel crate greater than 20 ft. in length, a crane is recommended, or two forklifts. Utilize an appropriate spreader bar to ensure even distribution of the weight to the lift points. No more than 1/3rd of the length of the panel should be left unsupported when lifting panel crate. Canvas or nylon slings should be used to lift panels. DO NOT use cable or chains – they will damage the panels.

### Foot Traffic

Walking on a metal roof can cause distortion of panels and damage to the finish. Foot traffic on an installed roof system must be kept to an absolute minimum. If continuous foot traffic is necessary for maintenance over the roof, then a permanent walkway should be installed.

For foot traffic during installation, provide walking platforms to avoid any panel damage.

If walking on the roof panels is unavoidable, walk only in the flats of the panel; walking on the ribs can damage the panels.

### Caution

*Metal roof installers must be in full compliance with all applicable safety regulations including OSHA regulations.*

## Field Cutting

Tin snips, portable shear or a “nibbler” type electric tool are recommended for field cutting StrongSeam SL175 panels. If a skill saw is used, the blade will generate slivers of metal chips. Any metal chips must be immediately removed from the panel because they will damage the finish and induce rust staining.

One approach to addressing this problem is to flip the panels over when cutting. The metal slivers can be brushed away from the back side, preventing finish damage to the top side of the panels.

### Caution

*All roof or panel surfaces must be free of debris at all times. Installed surfaces should be wiped clean at the end of each work day. Never cut panels over other metal surfaces. Metal shavings will rust on the surface which will void the warranty.*

*Always wear goggles for eye protection when cutting metal panels.*

# STORAGE & HANDLING

## Touch-up Paint

All painted panels, trim and flashings have a factory-applied heat-cured finish. During handling and installation, a panel may become slightly scratched or nicked. Paint pens are available in matching colors. It is recommended to use the sharp edge of the chisel tip to apply touch-up paint only to those areas that are in need of repair (apply touch-up paint to the scratch itself. Do not paint over panel finish). Be aware that touch-up paint does not have the superior chalk and fade resistance of the factory-applied finish and will likely discolor at an accelerated rate. Periodic touch-up may be required to maintain color match. Due to the limitations and formulation of field-applied touch-up paint, there is no warranty offered for color match or durability of the product.

When touching up scratches in panels or flashing, it is VERY IMPORTANT not to over paint the area to be touched up. Because of the curing solvent which must be added, air-dry formula touch-up paint WEATHERS DIFFERENTLY than the thermoset formula paint which is applied on the coil coating line. **For this reason, excessive strokes will create an unsightly appearance and will worsen over time, becoming aesthetically unacceptable.**

Please see **MPI's Touchup Paint Flyer** for complete instructions.

Select a paint pen that matches your panel color. Shake for 1 to 2 minutes.



Prime the pen by gently pressing down on cardboard or scrap material. Stop when you see paint appear on tip.



Test for color match on a small area out of line of sight. Allow to dry completely.



Apply a fine line of paint to scratch area only. Do NOT over-paint or blend.



# DESIGN & INSTALLATION

## Design Considerations

### Insulation & Ventilation

Properly designed and installed vapor barriers and ventilation systems prevent condensation and the resulting moisture damage and loss of insulation efficiency.

When highly-humid air contacts building surfaces that are below the dew point temperature of the air, condensation will occur.

Proper insulation can provide resistance to heat transfer and protection against condensation forming on cooler surfaces within the building or the roof system.


The building designer is responsible to specify an appropriate vapor retarder and insulation system for the project. Basic guidelines for control of condensation are as follows:

1. Faced insulation (insulation with vapor retarder) should be installed with the facing toward the warm side of the insulated area, typically, the interior of a building.
2. Insulation R-value must be high enough to maintain the temperatures of the vapor retarder above the interior dew point, using "worst-case" outside temperatures for a reference

3. Seal all seams and penetrations of the vapor barrier in order to provide a continuous membrane to resist the passage of water vapor.
4. Structure ventilation contributes significantly to reducing condensation. Whether by passive or active (powered) venting, air movement to the outside of the building reduces interior vapor pressure.

Buildings with attic space or retrofitted metal roofing system require vents at the eaves and peak of the roof in order to prevent a buildup of moisture under the roof.

Check local building codes for proper ventilation practices for your area.

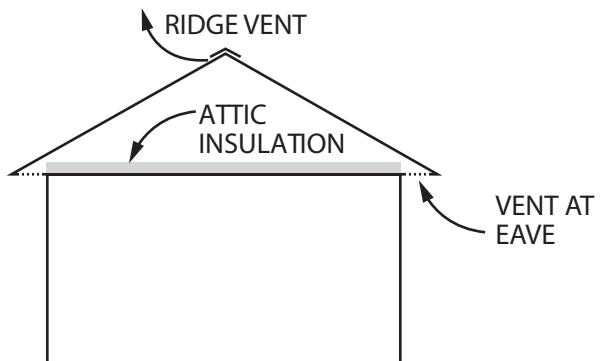

# DESIGN & INSTALLATION

## Roofing Substrates

In warm weather climates, synthetic underlayment should be used over the existing decking. The high temperature resistance prevents it from sticking to the panels and tearing, which can occur with asphalt-based felt paper.

In colder climates, ice and water shield should be used at the valley and eave. Apply over the decking before installation of the synthetic underlayment.



### Caution

*Use appropriate safety precautions when applying synthetic substrates because they can be slippery.*

## Roof Pitch Chart

Reference the chart below for specifying StrongSeam SL175 panels and trims.


fig. 4

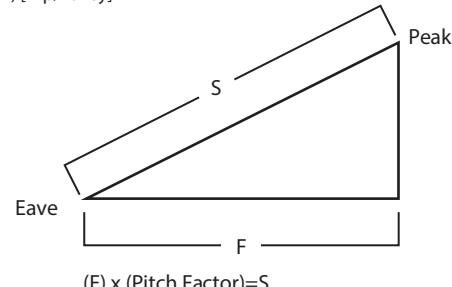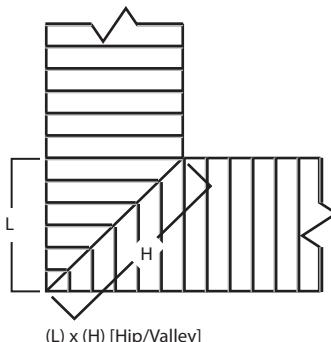



PITCH	PITCH FACTOR	HIP/VALLEY FACTOR	PITCH	PITCH FACTOR	HIP/VALLEY FACTOR
3:12	1.0308	1.4362	8:12	1.2019	1.5635
4:12	1.0541	1.4530	9:12	1.2500	1.6008
5:12	1.0833	1.4743	10:12	1.3017	1.6415
6:12	1.1180	1.5000	11:12	1.3566	1.6853
7:12	1.1577	1.5298	12:12	1.4142	1.7320

# STANDARD TRIMS


RAKE J-CLIP

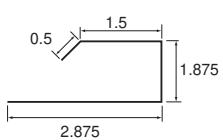


RIDGE J METAL

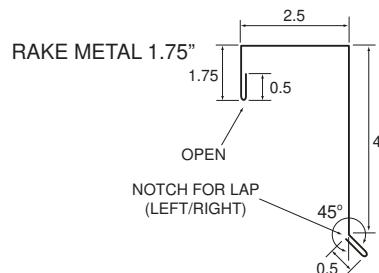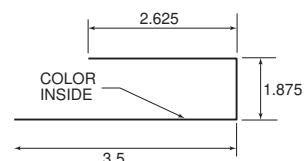


ROOF TO WALL

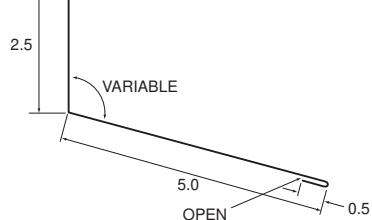


CHANGE OF PITCH

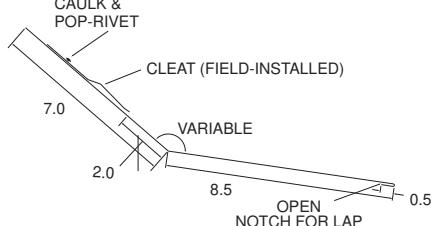


DRIP METAL

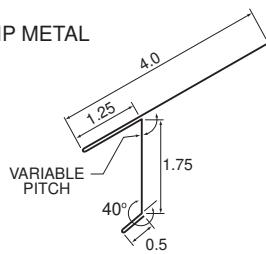


SIDEWALL FLASHING

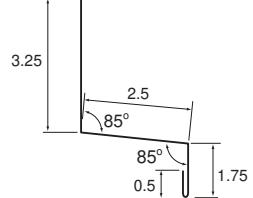


STANDARD VALLEY

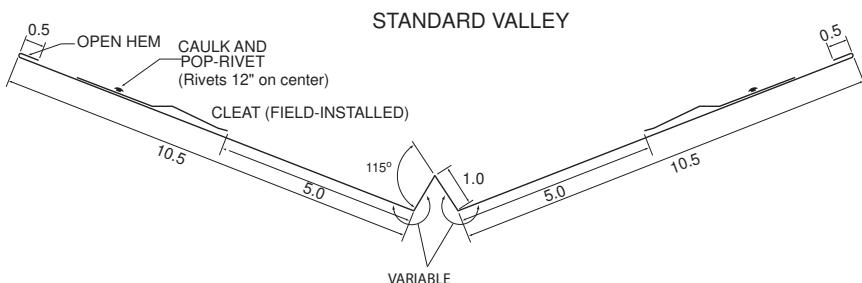


STANDARD 12" RIDGE CAP

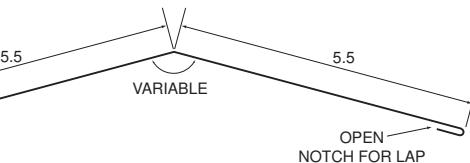


Z-CLOSURE

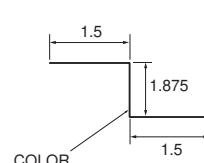

VENTED Z-CLOSURE

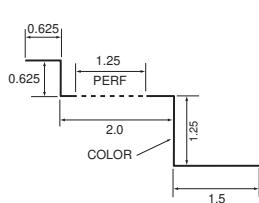

STANDARD 16" RIDGE CAP AND FOR VENTED RIDGE

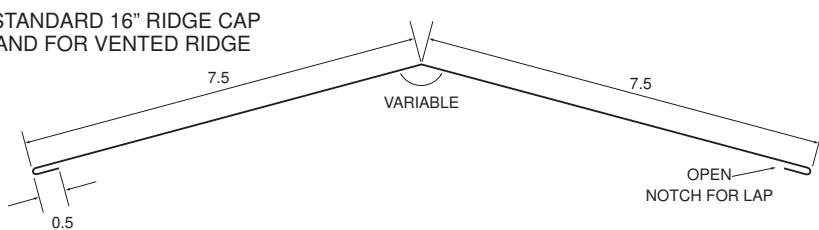

# ACCESSORIES

## Fasteners/Rivets



1/4-14 x 7/8" Lap  
available in 19 colors

12-14 x 1 1/4" SD  
For Sheet-to-Structure,  
available in 19 colors

12-24 x 1 1/4" DP5  
Drives up to 1/2" Thick Steel  
5", 6", 8" stocked

#12-14 x 3/4" Stitch Screw  
available in 18 Colors



Woodgrips,  
1", 1 1/2", 2", 2 1/2", 3"  
stocked in 19 colors  
Lengths up to 4" available

ULP Clip screw,  
10-9 x 1 1/8"  
wood applications

Pancake, 12 x 3/4" SD  
metal applications

Clip screw,  
#14 x 1 1/2", 2", 3", 4.5", 6", 7", 8", 9"  
for wood or up to 16ga. metal

Rivets  
#43, Stocked in 36 Colors

## Skylights

AG profiles stocked in 8' & 12' lengths  
R profile stocked in 12' length  
M profile stocked in 12' white  
Both AG & R stocked in clear and soft-white  
Flat Loc stocked in 8' white



## Pipe Flashing

Gray, Retro-fit & Silicone (high temp.)  
#1: 1/4" - 2" #8: 8" - 13"  
#3: 1/4" - 5" #9: 10" - 18"  
#5: 4" - 7"



## Sealants

### Butyl Tape

Single-bead, double-bead & triple-bead available  
3/32" x 3/8" x 45', 1/8" x 1" x 50', 3/16" x 2 1/2" x 20'



### Caulking

Metal Roof Sealant (stocked in 30 colors)

 
## Accessories



Touch-up Paint Pen,  
Stocked in 18 colors


#30 bit for  
rivet installation

concrete bits stocked in 1/4", 3/8" & 1/2"



Cee Purlins 3", 4", 6", 8"  
Zee Purlins 4", 8"  
2" x 2" Base Angle

 Nut Setters:  
Sizes: 1/4", 5/16" & 3/8"



Sno-Gem Snow guards

Power Cutter Snips,  
Left & Right Hand



Retro-Ease  
shingle spacer

Metal Saw Blade:  
Size: 7" for steel,  
9" for thick steel



Self-adhering underlayment,  
2' sq. rolls

Sliding Door  
Products



Synthetic underlayment,  
10' sq rolls

Doors for  
Metal & Post Frame

Sliding Door  
Products

## Insulation

Solar Guard 4' x 125'  
6' x 125'

Sizes: 3', 4' & 6' wide stocked  
in 53' & 103' long rolls

3" vinyl-faced insulation,  
cut to size by lineal foot available

R+ Heatshield Radiant Barrier

Bubble Insulation, 4' & 6' x 125' w/ tape & tabs  
in reflective/reflective, reflective/white,  
single & double bubble, meets ASTM E84-08



## Insulation Tape

Patch Tape - 3" x 150'  
For reinforced vinyl applications

Double-sided Tape - 1 1/2" x 180'

Foil Tape - 3" x 150',  
White Tape - 3" x 180'  
For bubble insulation



## Closure -- Die-Cut Foam & Expandable A10 Universal

Stocked in Profiles: AG, M, R, Flat-Loc,  
7.2, & 7/8" Corrugated



A-10 expandable closure  
Fits profiles up to 1 1/2" deep  
Available sizes:  
1" x 1 1/2" x 20' for AG, M & Flat Loc panels,  
1 1/2" x 1 1/2" x 15' for R panels



Flex-Pro  
Weather-tite Ridge Vent Closures  
stocked in 3' joints

## Concrete Anchors

Wedge anchors      Multiple sizes available



Nail-in anchors      Sizes: 1/4" x 1 1/4" stocked  
up to 2" available



## Flat Sheets

4 19/16" x 10' 1"- 26 ga. 22 colors  
4' x 10' - 16,18,20,22,24,26 ga. galvanized  
4' x 10' - 24,26 ga. paintgrip galvanized  
4' x 10' - 24ga. PVDF  
3' x 10' - 16oz Copper



# PRELIMINARY INSTALLATION GUIDE

Please familiarize yourself with all installation instructions before starting work.

Prior to panel installation, the installer should examine the decking or framing to ensure that all supporting members are straight, level and plumb to help prevent panel distortion. Substructures should be designed to meet all applicable code requirements.

Panels must be installed straight, plumb and square to the eave. Some field cutting and fitting of panels and trims, as well as minor field corrections are a part of normal installation work.

Follow the manufacturer's installation procedures, including fastener methods and creation of penetrations. Trim should be installed in proper alignment with the panels.

Sealants must be field-applied according to manufacturer's instructions on dry, clean surfaces.

All trims, closures and accessories shown on the installation drawings are available from Metal Panels Inc. unless otherwise noted.

Oil-canning in the flat area of the panel is common to the industry and does not affect the integrity of the panel. Oil-canning is not a reason for rejection.

The installer is responsible to insure a suitable decking prior to the application of StrongSeam SL175 panels. Panel distortions caused by handling, uneven decking, ripples or laps in the underlayment, construction debris or extreme temperature changes are not cause for rejection of material.

## Substructure Precautions

Panel distortion may occur if applied over misaligned or non-uniform substructure. Check the roof deck for squareness before installing StrongSeam SL175 panels.

# PRELIMINARY INSTALLATION GUIDE

Two methods for verifying squareness of the structure for proper panel installation are shown below.


## Method 1:

Measure diagonally across one slope of the roof from similar points at the ridge and eave and obtain the same dimension. Note that it is possible that a roof is out of square even with identical measurements. To verify, additionally measure the two longest sides.

## Method 2:

A 3-4-5 triangulation system may be used. Measure a point from the corner to the edge of the roof at a multiple of three (3). Measure another point from the same corner along the other edge at a multiple of four (4)

Then, measure diagonally between the two points established; the dimension should be exactly a multiple of five (5) to have a square corner. Use this approach on more than one corner of a slope to verify building squareness. If the endwall cannot be made square, the roof system cannot be correctly installed.

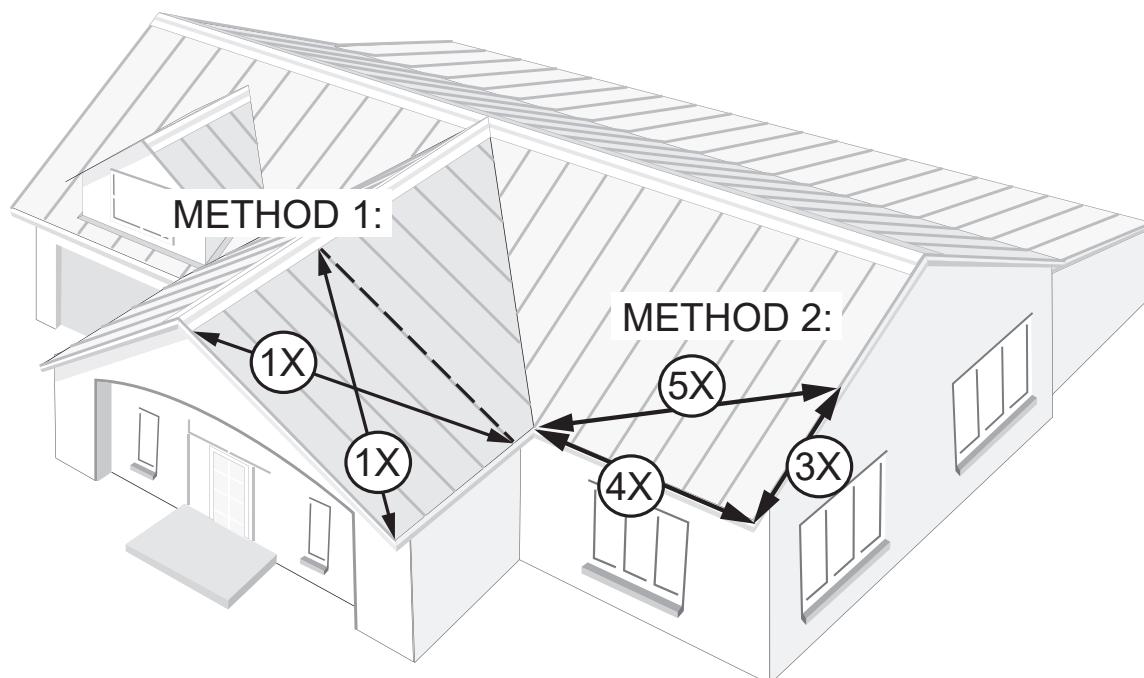

# PRELIMINARY INSTALLATION GUIDE

## General Installation Overview

Familiarize yourself with all installation instructions before starting work. Before beginning installation, you should examine the substrate or framing to ensure that all supporting members are straight, level, and plumb to avoid any panel distortion. Substructures should be designed and constructed to meet all necessary code requirements.

Some field cutting and fitting of panels and trims is to be expected by the installer and minor field corrections are a part of normal installation work.

It is the responsibility of the installer to ensure a suitable substrate prior to the application of a standing seam roof. Pan wave, commonly known as "oil-canning" in the panel can be caused by an uneven substrate, ripples, or laps in the vapor barrier, debris, protruding nails, staples or screws and are not defects in the material and are not the responsibility of Metal Panels Inc.

Oil-canning distortion in the flat area of the panels is common to the industry and does not affect the integrity of the panel. Therefore, oil-canning is not a reason for rejection. Optional striations reduce the frequency and severity of oil-canning.

All trims, tools, and accessories shown on the installation drawings are available from Metal Panels Inc. unless otherwise noted.

The panels should be installed plumb, straight and square to the eave. To keep the bottom edge of the roof perfectly straight and even, the panels must be installed square to the bottom edge. Begin by checking the roof for square; if it is square, you may pull the layout marks directly from the edge of the rake.

If the roof isn't perfectly square, install the first panel parallel to your square line, making sure that the Rake-J clip does not hang over the gable edge of the roof sheathing. Any overhang of the rake J-clip can prevent the rake trim from fitting tight against the rake.

Note that care must be taken when aligning metallic panels. All metallic panels must run the same direction for a uniform appearance. See directional arrows on the underside of the panels and make certain that they all run the same direction.

# PRELIMINARY INSTALLATION GUIDE


## Panel Installation

1. Panels should be installed perpendicular to the ridge for ridge trim attachment. Check panel alignment.
2. Attach Rake-J clip to roof with low-profile pancake screws spaced at 30" on center. Female leg of the first panel rests inside J-clip.
3. Align the female edge of the first panel with the chalk like that was snapped at the rake edges. This line can be 0" – 1  $\frac{3}{4}$ " from the rake.
4. Fasten the panel along the male edge with panel clips, using low-profile pancake head screws. Place clips no more than 24" apart along the length of the panel. (See deck thickness chart) Panel will be hooked over drip metal.



## FASTENER SPACING

Maximum fastener spacing for 14" wide 26 gauge panels with wind loads up to 80 mph.

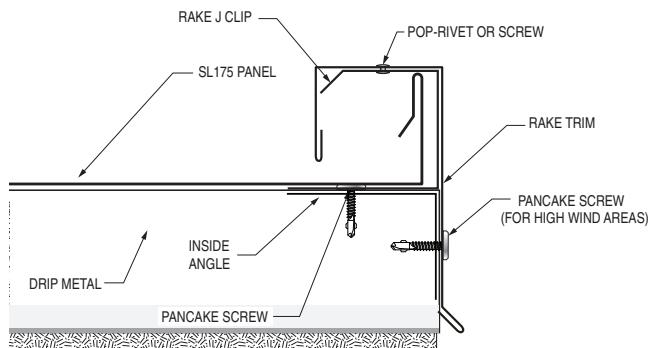

## DECK THICKNESS

## SPACING


1/2"	.....	18" O.C.
5/8"	.....	21" O.C.
3/4"	.....	24" O.C.

# PRELIMINARY INSTALLATION GUIDE

5. Align the second panel female edge with the starter panel male edge. Panels must be flush to one another. Remember, panels should hook onto drip edge.
6. Lightly compress and snap panel over clips at the seam. Snap panels from the eave to the ridge. Screw the second panel in place using low-profile pancake screws and panel clips.
7. Continue to apply panels as in steps 5 and 6.

## Eave Termination

Panels at the eave can be terminated in two ways; with hems (recommended) or with fasteners. Each will depend on the aesthetic consideration determined by the installer or building owner.

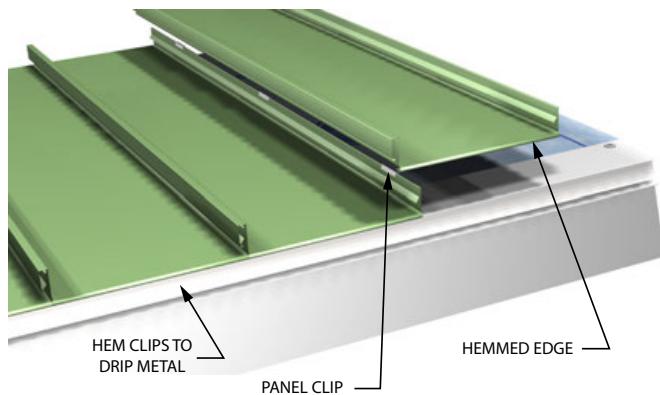


### Eave Termination without Fasteners (Recommended)

*Panels terminated with a hemming tool to provide a smoother appearance.*

Step 1: Create a tab in the panel by cutting a notch in both sides of the panel. Cut through the male and female ribs 1" up from panel end. See illustration below.





Step 2: Place the hemming tool over the tab edge as shown below.

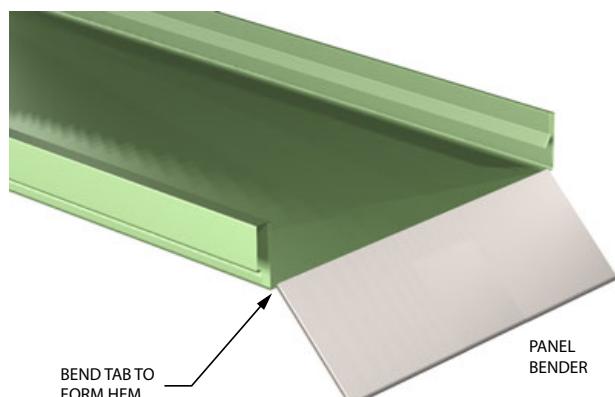

Step 3: With the hemming tool bend the tab down and under to form a 180° bend.

# PRELIMINARY INSTALLATION GUIDE


**Step 4:** The panel is then ready to be installed over the drip edge trim, using the lip on the drip edge trim to secure the panel in place at the eave.

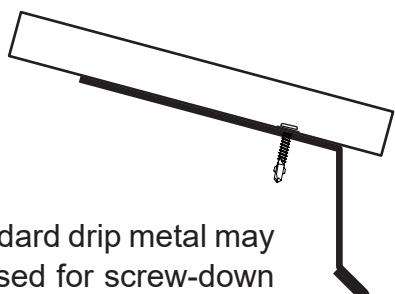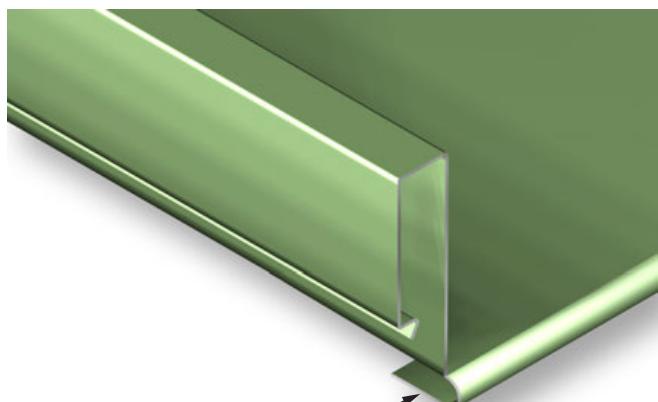

Standard drip metal may be used for screw-down applications.

## Eave Termination with Fasteners (Alternative)

Panels can be fastened along the eave with a #10 x 1" painted neoprene woodgrip fastener. Use butyl tape under the panel. Fasten along a line parallel to the eave edge and 3" up from the eave edge. The fasteners can be spaced 4" apart in the minor rib striations, as shown below. When using the drip edge trim to terminate the eave, panels must be ordered approximately 1"-2" longer than the ridge-to-eave length to account for the desired overhang.

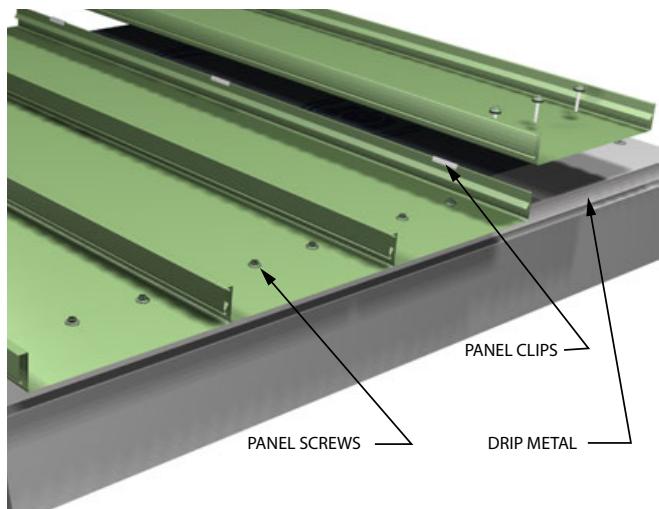

# PRELIMINARY INSTALLATION GUIDE


## Trim Installation Overview

On runs of more than 10 ft. that require more than one length of trim, overlap the pieces by 3" unless otherwise specified. When not affecting the water-tightness of overlaps, place overlaps such that the raw edges face away from the primary ground-level point of view. Trim is attached with rivets or washered screws; take care to drive the screws enough to compress the neoprene washer, but not enough to deflect the roofing or the trim.


The critical part is finishing the ends of each trim run. It may take more time and attention, but cutting and folding the ends of the trim will give the roof a more finished look.

## Drip Edge


1. Screw the drip edge to the decking, 30" max. O.C.

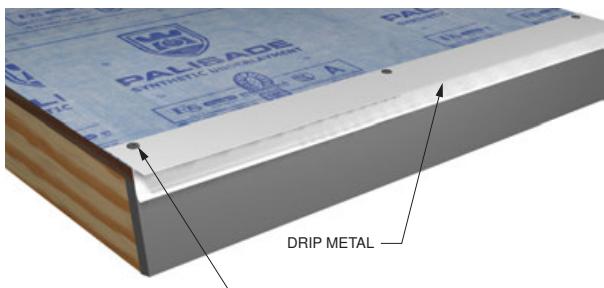


2. Notch the SL175 panels by 1" at the ribs to create a tab of the panel width.

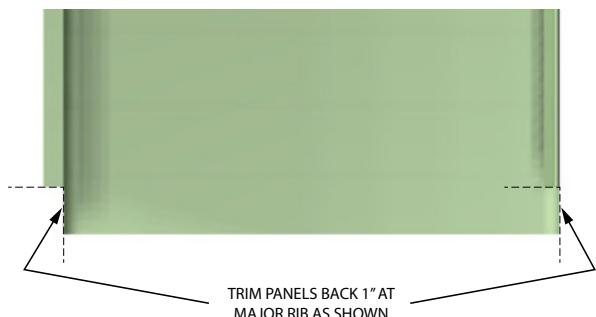


3. Using a hemming tool, fold the panel tab down and in, 180° to form an open hem.

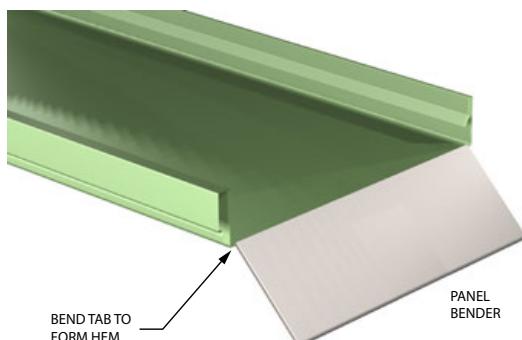

4. Slide panel over the drip edge, screw clips into decking, and snap on next panel.

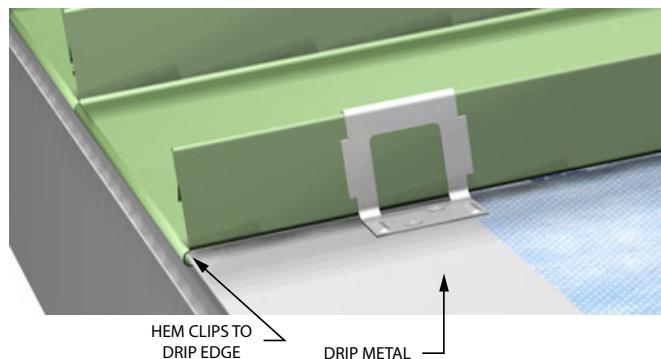


5. Leave a tab when notching the rib, and use sealant in panel ends. Fold over the tab end of the rib for a more finished look.

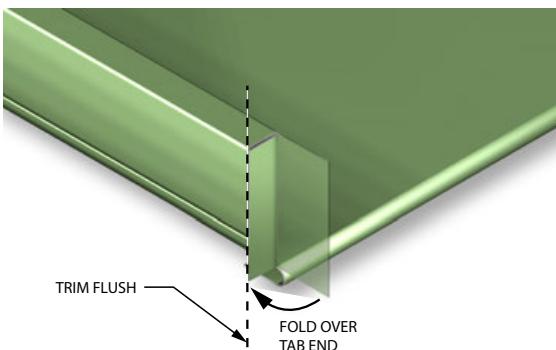


# PRELIMINARY INSTALLATION GUIDE

## Rake Trim

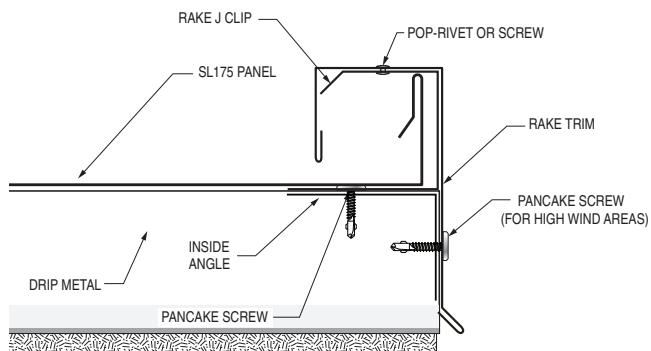


1. Install the continuous rake j-clip to the decking before installing panels using pancake screws, 30" max O.C.

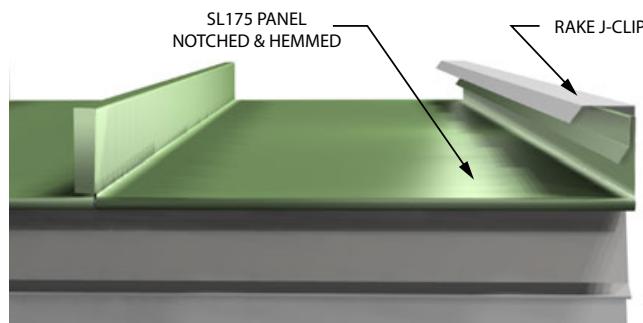

2. If roof requires a partial panel, measure width and add 1", then use a folding tool to bend a 90° leg.

3. For high wind areas, install the rake trim with pop-rivets 30" O.C. onto the rake J-clip, then using panel screws along the outside edge of the rake, 30" max. O.C.
4. Rake trim comes standard at 10'. For longer runs, overlap the rakes by 3", using a bead of sealant between laps.


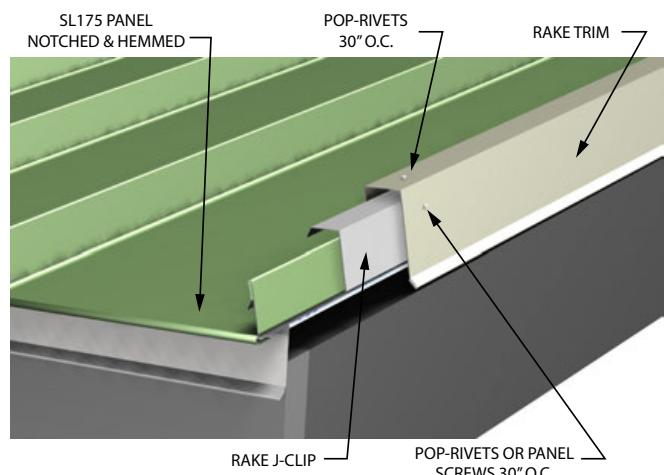


# PRELIMINARY INSTALLATION GUIDE

## Sidewall Trim

1. Install roofing panels up to the sidewall.
2. Install sidewall trim onto the vertical wall, over top of sidewall felt or ice/water shield. Sidewall trim should overlap roofing rib completely. If roof requires a partial panel, measure width and add 1", then use a folding tool to bend a 90° leg.
3. Screw trim to sidewall using low-profile pancake head woodgrips.



Overlap the trims by 3" using a bead of sealant between laps

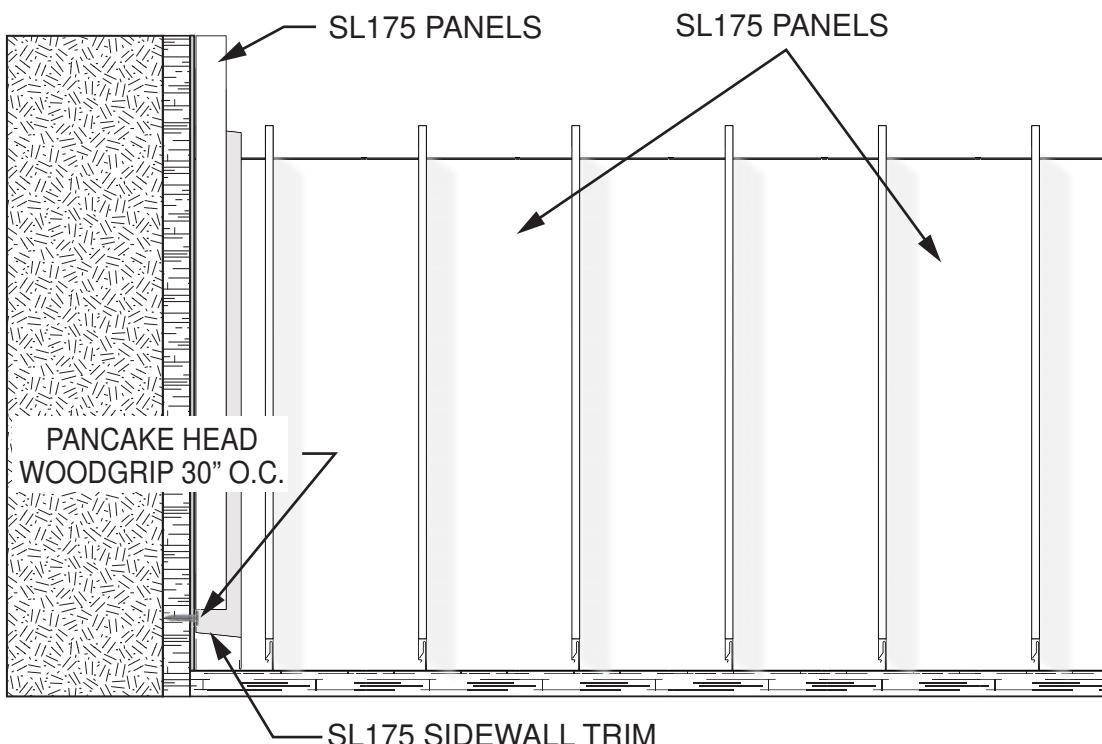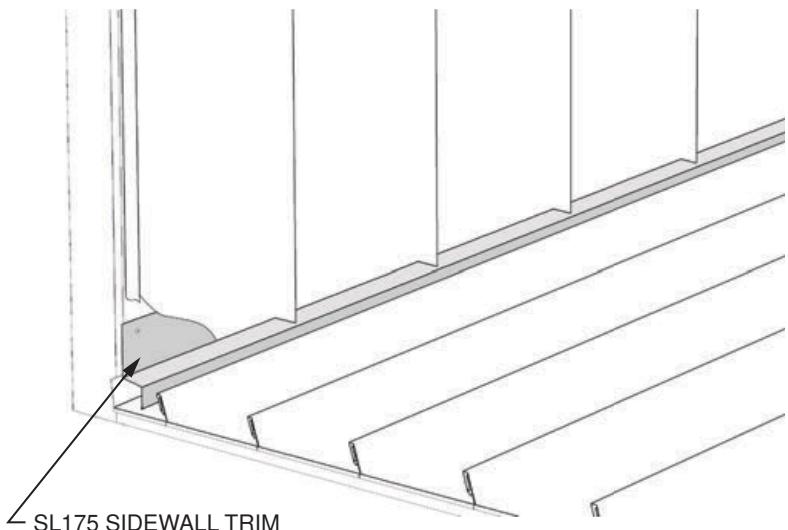

# PRELIMINARY INSTALLATION GUIDE

## Endwall Trim (Roof-to-Wall)


1. Install roofing panels up to the endwall. Install Z-closure on top of the panel along the endwall, using butyl tape to ensure proper sealing. Z-closures are cut to width to fit between the major ribs. Trim ends of Z-closure to fit tightly to panel ribs. Use three low-profile pancake head wood grips to secure Z-closure to panel. Test-fit the endwall trim onto the Z-closure to locate position of Z-closures. Do not screw down the Z-closures until you are certain of their exact location. Use butyl tape on the underside of each Z-closure. Seal each vertical cut edge of Z-closures using a bead of sealant.
2. Slide the open hem of the endwall trim over the Z-closure and screw into the endwall. Pop-rivet the endwall trim to the Z-closures, between the panel ribs. Do not install the pop-rivets into the panel ribs.
3. For endwall trim runs longer than 10 ft., overlap the trims by 3", using a bead of sealant between the laps.
4. For concrete endwalls, use the endwall trim with reglet. See diagram below for details. Protect panels from dust & debris while cutting reglet groove.

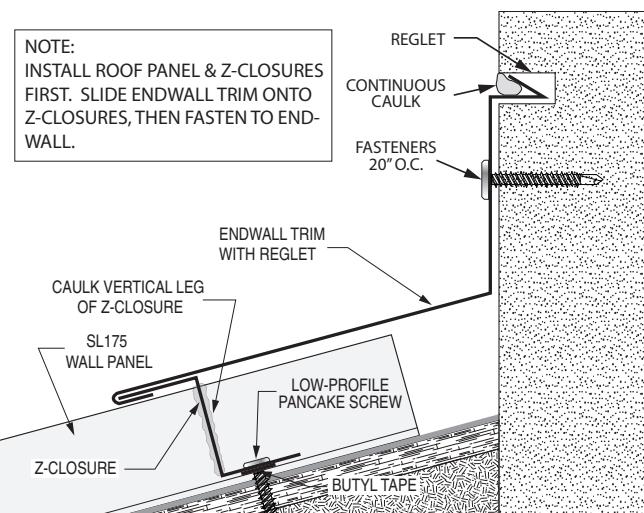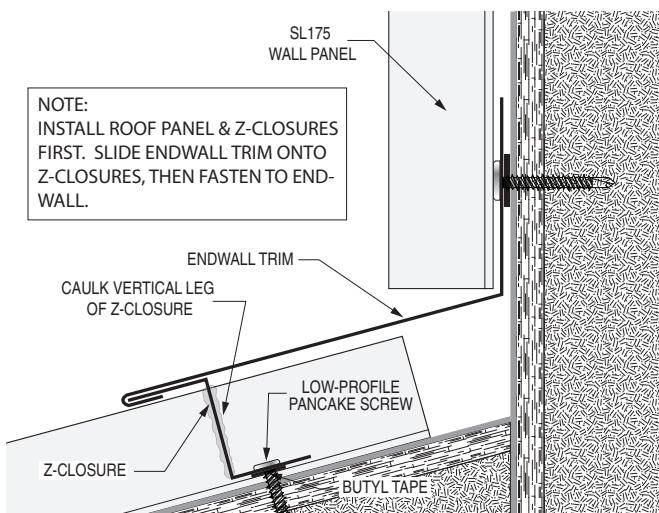


# PRELIMINARY INSTALLATION GUIDE

## Valley Installation

1. Using a folding tool, hem the eave bottom end of the valley 1" and slide over the drip edge, if used. If flush drip metal is used, fold valley hem down over drip metal and pop-rivet in place.
2. Install the valley to decking, placing low-profile pancake head screws up as far as possible on the high outsides of the valley, 30" max O.C.
3. Install valley cleats 4"- 5" up from the center valley rib using low-profile pancake screws and sealant. Seal the cleat to the valley using butyl tape or caulk.

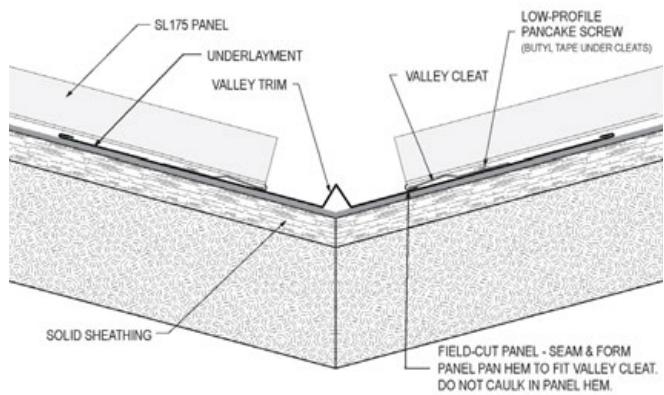


4. Fabricate an open hem on each panel at the correct pitch for the valley. Slide the panel up to engage the cleat, snap in the panel at the rib, and screw male side of panel to decking.
5. Seal the panel ends and leave a tab when notching the rib. Fold the tab over the end of the rib for a more finished look.

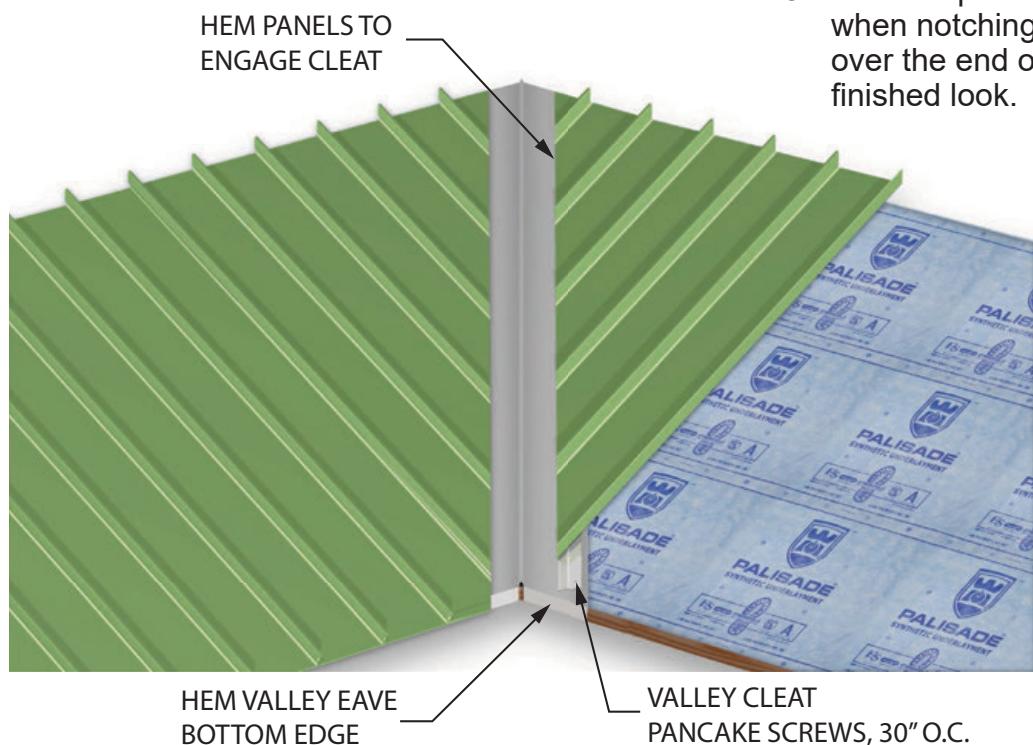


# PRELIMINARY INSTALLATION GUIDE

## Change Of Pitch Transition Trim

1. Install the lower roof panels per instructions and attach Z-closures. Trim ends of Z-closure to fit tightly to panel ribs. Use three low-profile pancake head wood grips to secure Z-closure to panel. Test-fit onto the Z-closure to locate position of Z-closures. Do not screw down the Z-closures until you are certain of their exact location. Use butyl tape on the underside of each Z-closure. Seal the cut vertical edges of the Z-closure with tube sealant.
2. Slide the open hem of the Change Of Pitch trim over the Z-closure and screw the trim to the upper decking using low-profile pancake head woodgrips. Pop-rivet trim to Z-closures.

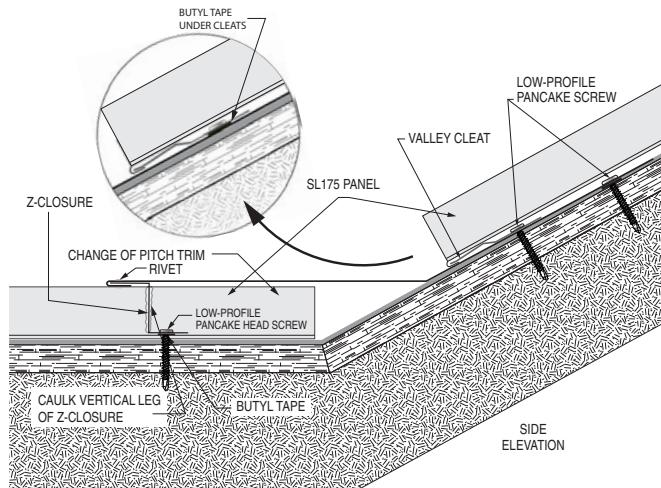


3. Install cleats 4"- 5" up from the center of Change Of Pitch trim using low-profile pancake screws and sealant. Seal the cleat to the trim using butyl tape or caulk. Apply panels to upper roof overlapping COP transition by 5".
4. Fabricate an open hem on each panel at the correct pitch for the COP trim. Slide the panel up to engage the cleat, snap in the panel at the rib, and screw male side of panel to decking.
5. For longer runs, overlap trim by 6" and apply two beads of sealant between the laps.

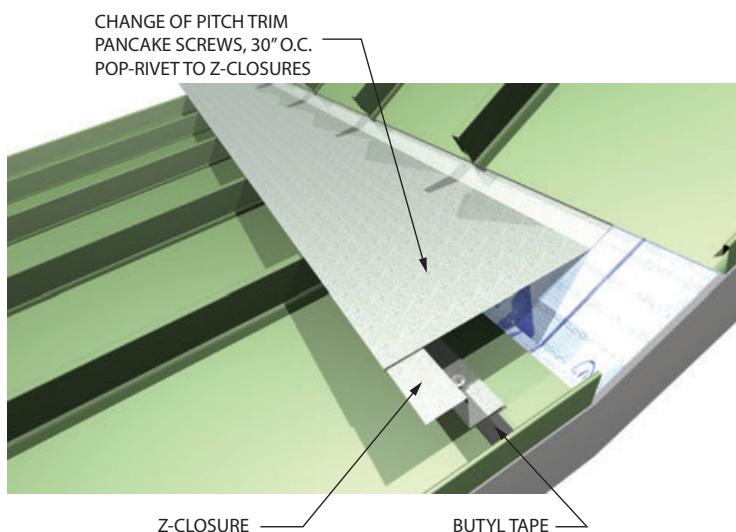


# PRELIMINARY INSTALLATION GUIDE

## Ridge Cap Trim

1. Install panels on both sides of roof up to the ridge, and install Z-closures. Trim ends of Z-closure to fit tightly to panel ribs. Use three low-profile pancake head wood grips to secure Z-closure to panel. Test-fit the endwall trim onto the Z-closure to locate position of Z-closures. Do not screw down the Z-closures until you are certain of their exact location. Use butyl tape on the underside of each Z-closure. Seal the vertical cut edges of the Z-closure with tube sealant.
2. Snap ridge cap over Z-closures and pop-rivet to the Z-closures between the panel ribs.

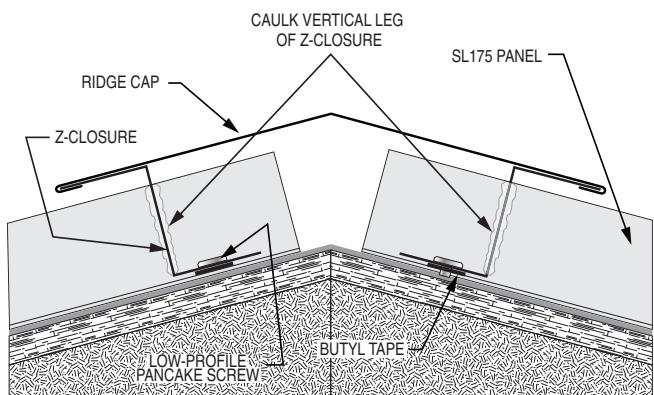


3. When overlapping ridge cap, a notched 6" overlap is required. MPI supplies Hip and Ridge factory-notched for a 6" lap. Pop-rivet with two beads of sealant between the laps.
4. Ridge caps can alternately be assembled using Ridge-J or Vented Ridge-J in place of the Z-closure.

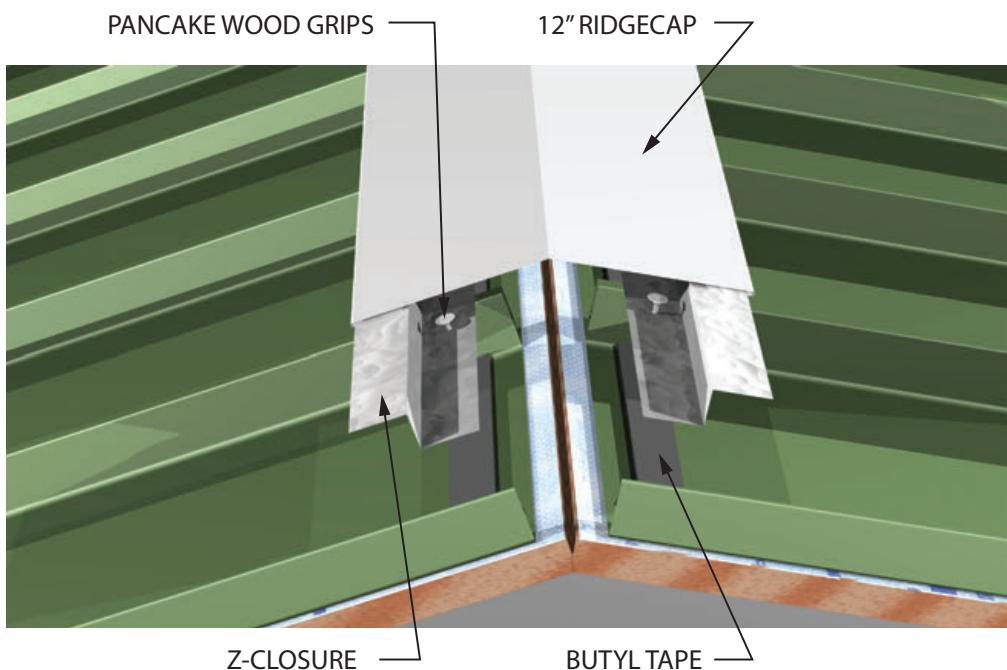


# PRELIMINARY INSTALLATION GUIDE

## Vented Ridge Cap Trim

1. Install panels on both sides of roof up to 1" short of the ridge, and install Z-closures. Decking must be 1" short of the ridge each side, for a 2" vented clearance. Trim ends of Z-closure to fit tightly to panel ribs. Use three low-profile pancake head wood grips to secure Z-closure to panel. Test-fit the endwall trim onto the Z-closure to locate position of Z-closures. Do not screw down the Z-closures until you are certain of their exact location. Use butyl tape on the underside of each Z-closure. Seal the vertical cut edges of the Z-closure with tube sealant.
2. Snap ridge cap over Z-closures and pop-rivet to the Z-closures between the panel ribs.

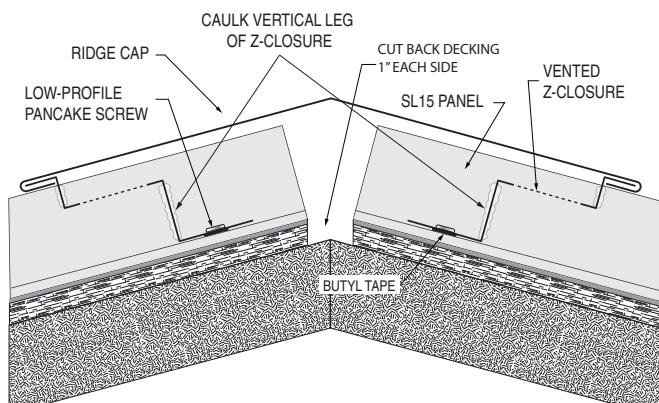

3. When overlapping ridge cap, a notched 6" overlap is required. MPI supplies Hip and Ridge factory-notched for a 6" lap. Pop-rivet with two beads of sealant between the laps.
4. Ridge caps can alternately be assembled using Ridge-J or Vented Ridge-J in place of the Z-closure.

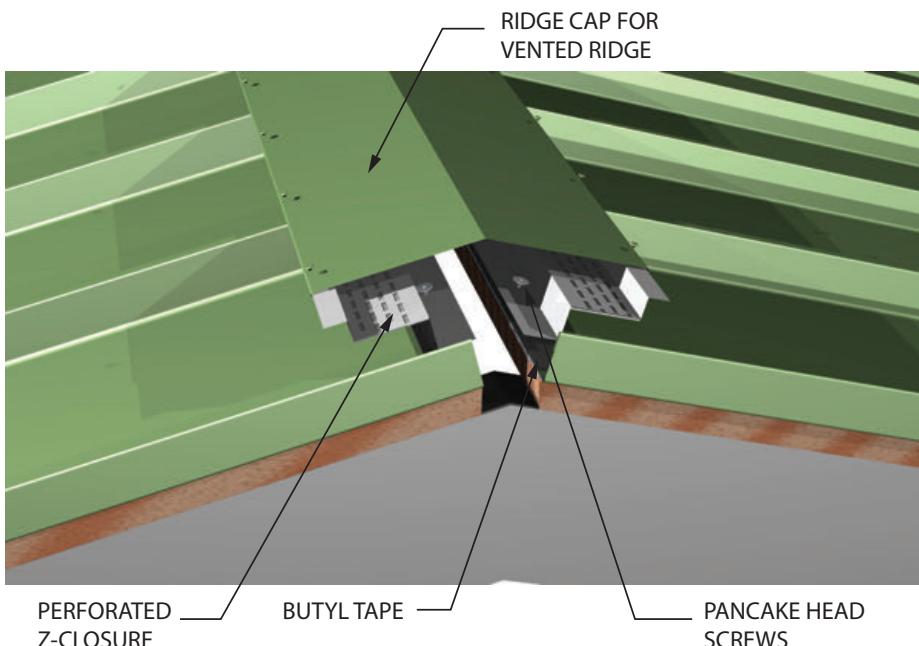


# PRELIMINARY INSTALLATION GUIDE

## High Side Eave Trim

### Notes:



1. Temporarily secure panels at peak until the zee-closure is installed.
2. Field cut zee-closures to fit panel width.
3. Apply tape sealant to panels 1.5" from the end of the panels
4. Install zee-closures to panels at 6" O.C. Vertical leg of zee-closure should be 2" from the end of the panel.
5. Seal ends of zee-closures to panel with tube sealant. Install tape sealant to the top leg of zee-closure.
6. Attach high side eave trim to zee-closures with fasteners at 6" O.C.

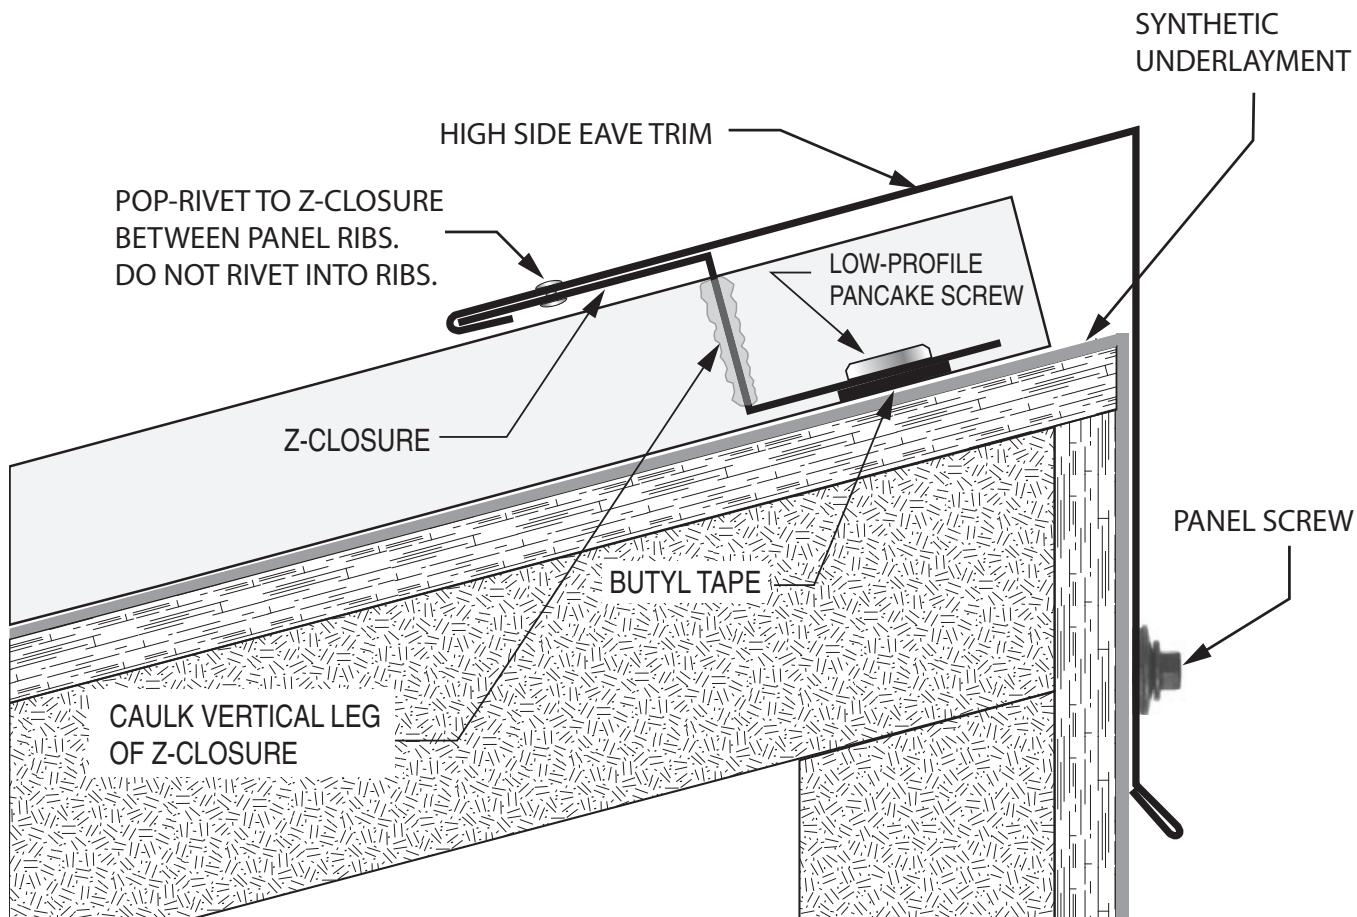

# PRELIMINARY INSTALLATION GUIDE

## Pipe Penetration

1. Field cut hole in panel 1" less than the diameter of stack. Back-cut hole and bend panel up around stack. Caulk continuous around stack.
2. Pipe penetration should be in pan of panel only; adjust stack to avoid penetration through a rib.
3. Cut hole to allow for thermal movement of panels 30' or more.
4. If stack is metal, it must be painted to prevent rust run-off from staining panels.

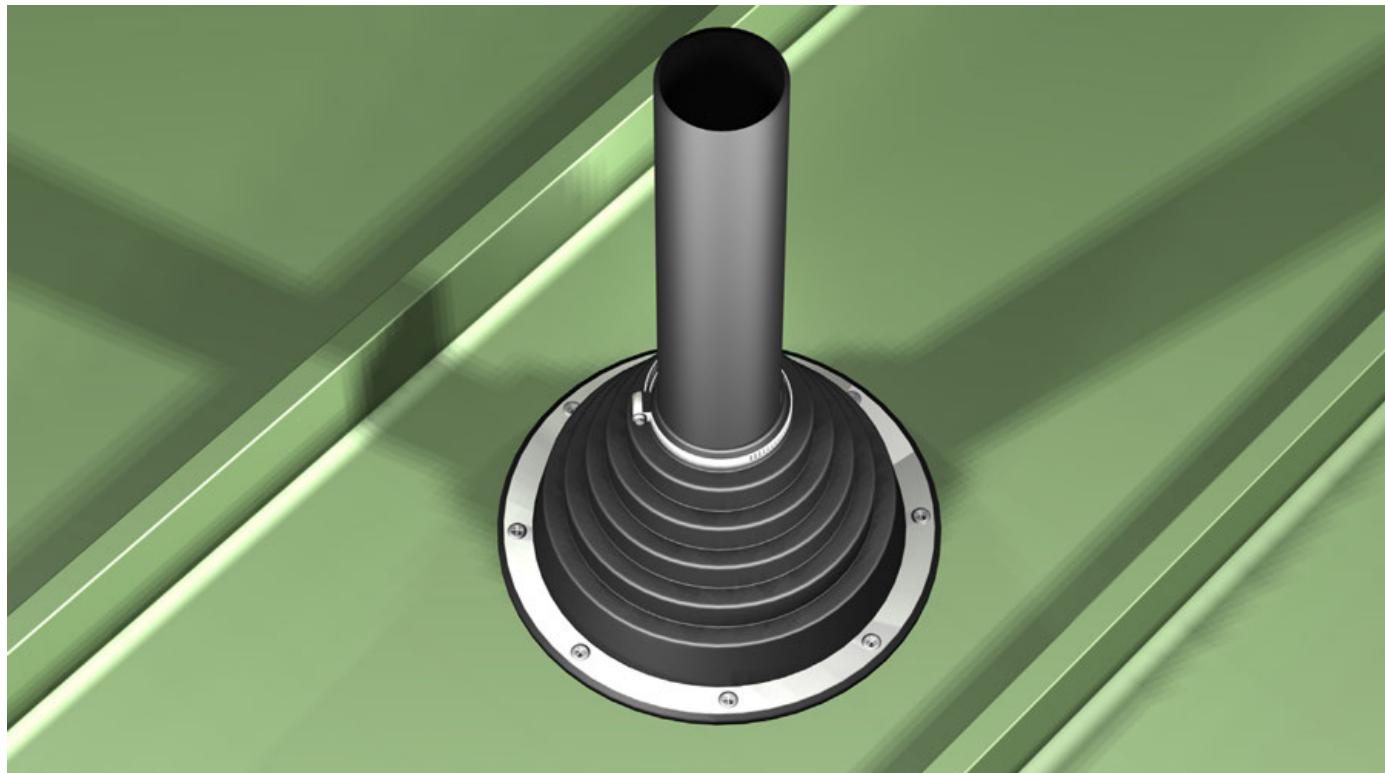
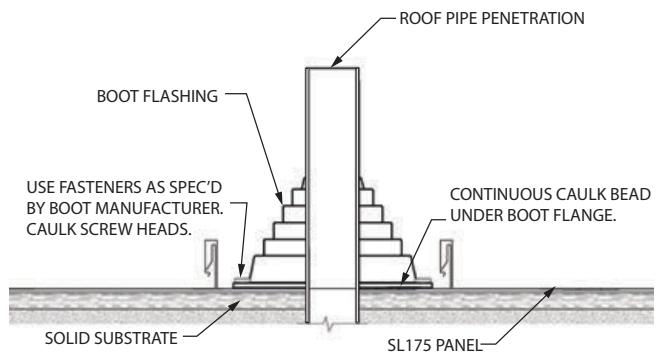


# PRELIMINARY INSTALLATION GUIDE

## Square Penetration:

1. For square penetrations, build out a flashing assembly as described on the following pages.
2. The flashing assembly is similar for metal or wood solid substrates; however, appropriate fasteners for each method must be used.
3. Open framing must have a minimum of 4" solid substrate upward around curb penetrations and a minimum of 12" on each side of the penetration spanning existing purlins.



If metal deck, screws must penetrate bottom of decking.

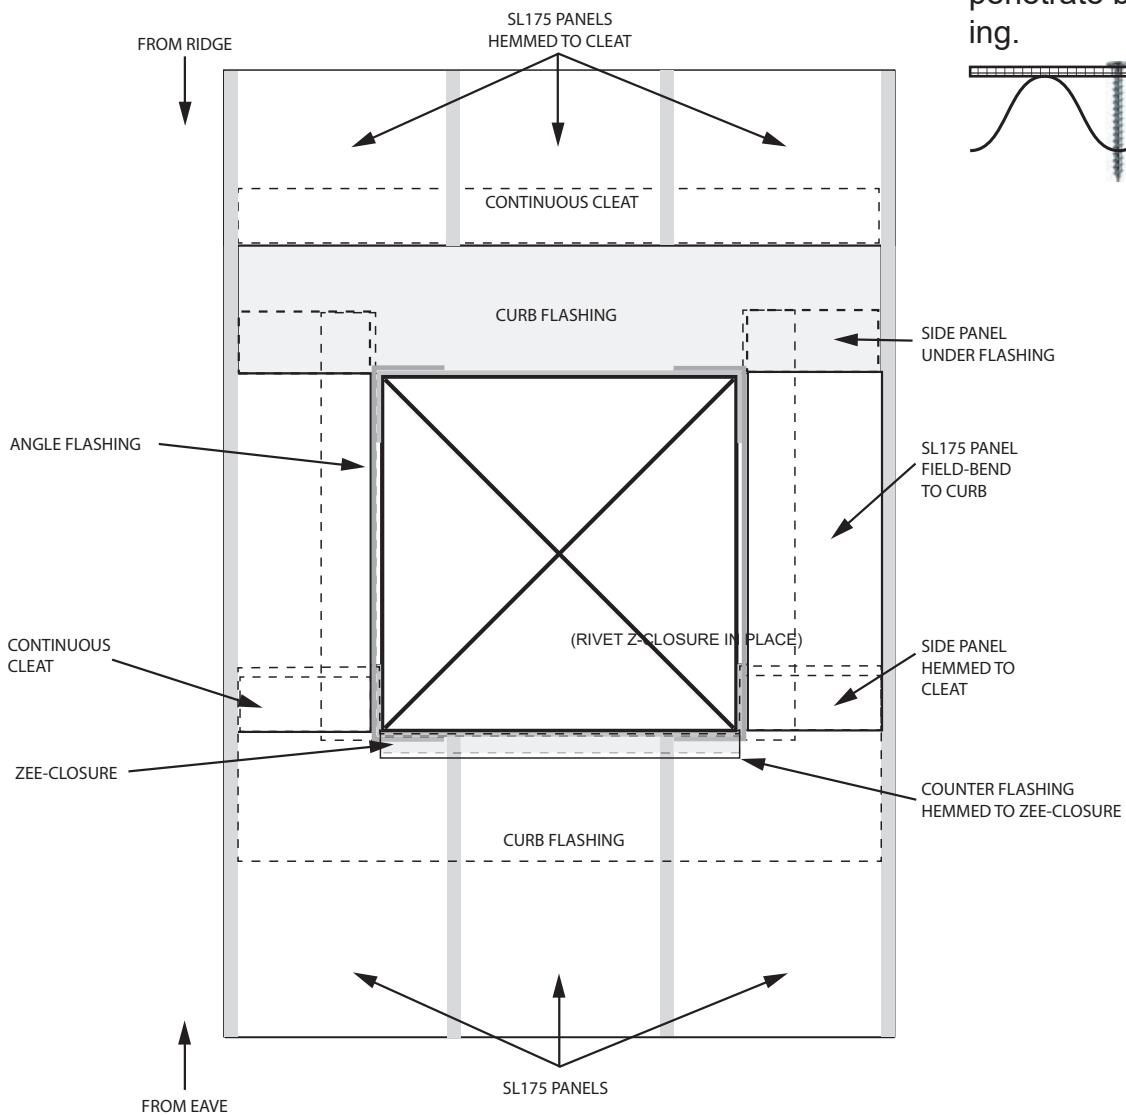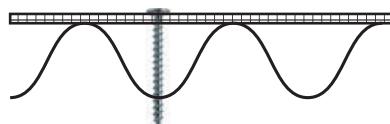


# PRELIMINARY INSTALLATION GUIDE

## Square Penetration:


1. Run roofing underlayment beyond the penetration in order to overlap up onto the square protrusion by a minimum of 4" on all sides. Overlap at corners.

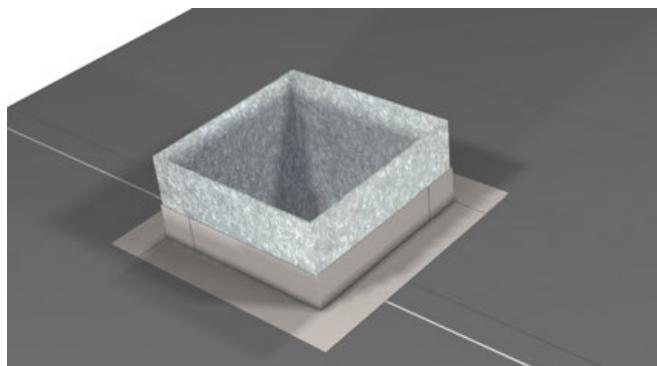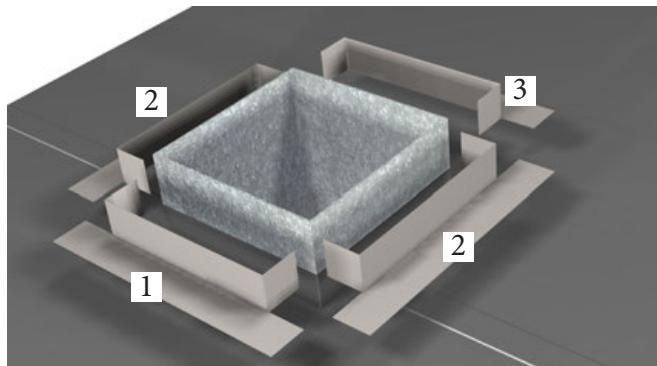

3. Cover angle flashing with a second layer of underlayment to protect against metal-to-metal contact.

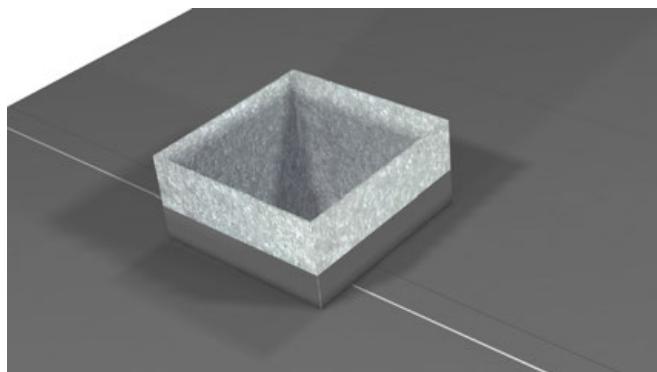


2. Fit angle flashing to the square protrusion. Flashing should be a minimum of 4" x 4". Bend tabs around box; fit lower flashing first, then fit side flashings, followed by upper flashing tabbed over the side flashings. Caulk all joints and fasten with recommended clip screws.

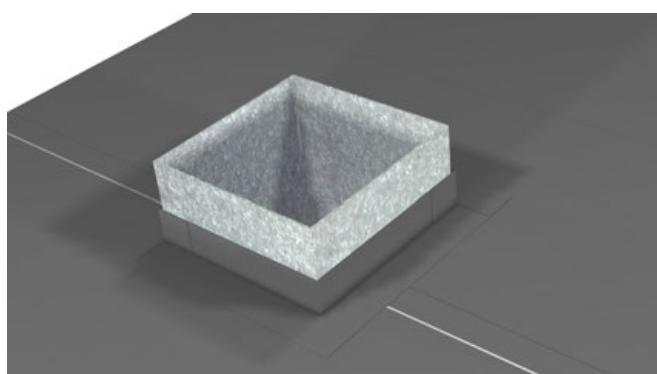


# PRELIMINARY INSTALLATION GUIDE

## Square Penetration:


4. Lay out roof panels to ensure optimum rib placement with regards to the roof penetrations. Roof up to the square penetration. Cut and fit panels around protrusion, allowing a minimum of a 4" tab up and around the box. Panel lengths at the penetration should run from the eave up to 12" to 15" beyond the penetration, as shown.

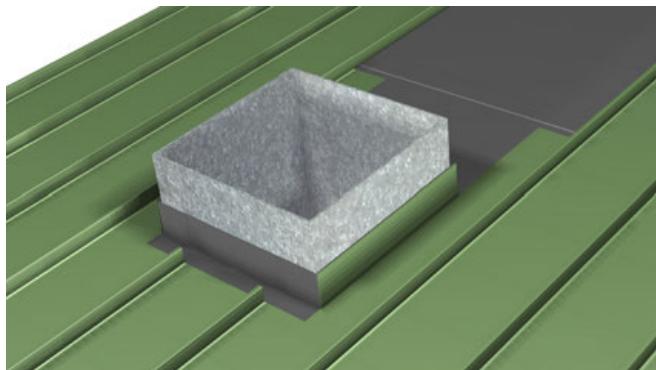

5. Align the counter flashing and z-closure, marking the z-closure location. Apply butyl tape to the z-closure, and fasten the z-closure with clip screws. Fold tabs from the z-closure back to the sides of the protrusion. Install the roof to wall counter flashing.

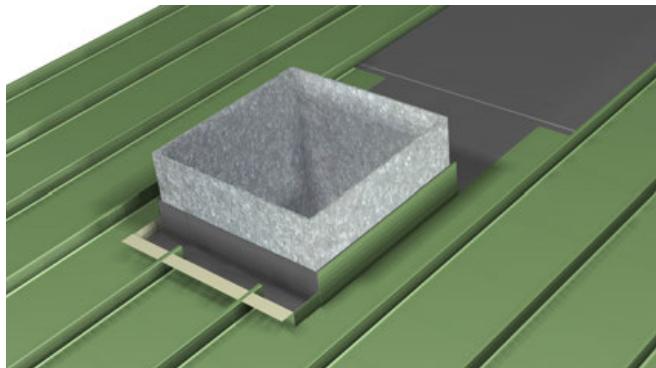



6. Attach the roof to wall flashing and caulk all joints. Use rivets to attach the z-closure. Caulk z-closures as typical, and rivet flashing at overlaps.

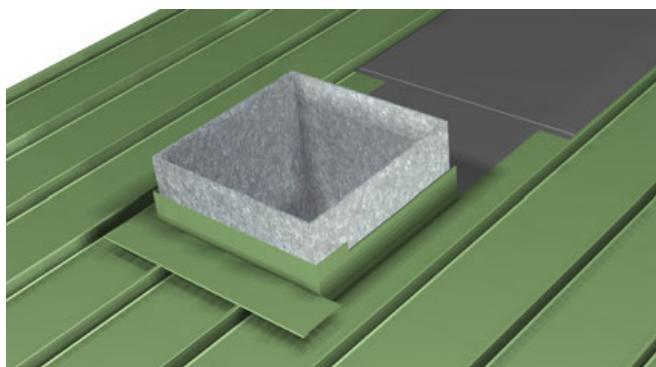





# PRELIMINARY INSTALLATION GUIDE

## Square Penetration:

7. Trim or tab side flashing and install, making sure to overlap the lower roof to wall flashing. Attach with screws, and rivet to roof to wall/z-closure assembly. Caulk all joints.

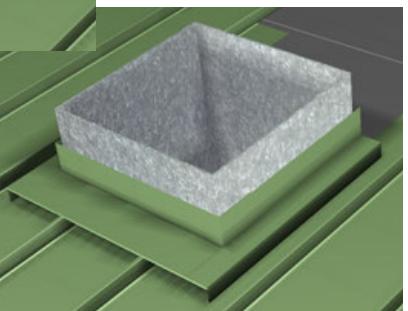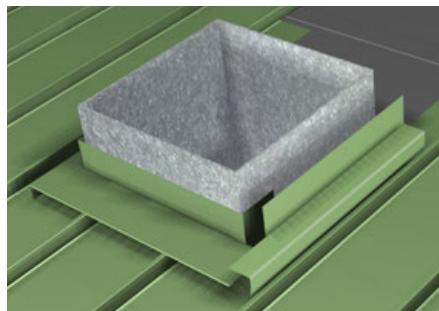

  
8. Fit & tab upper (ridge-side) angle flashing. Flashing base should be a minimum width (see table below) to accommodate cleats and roofing panel joint.

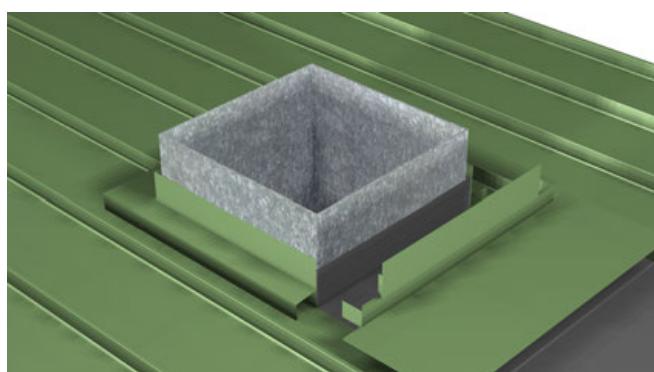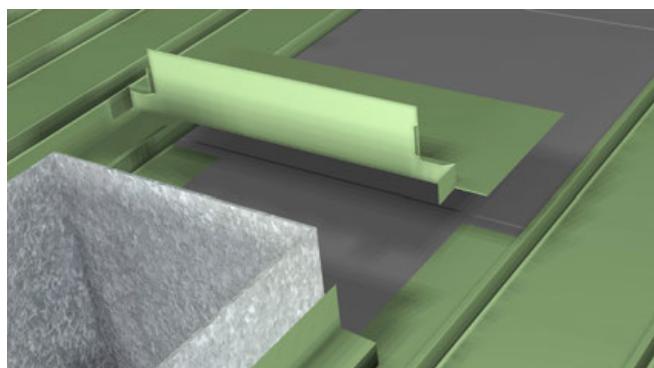


# PRELIMINARY INSTALLATION GUIDE

## Square Penetration:


9. Run 2 beads of caulk across the roof panels and fit flashing in place. Attach with screws every 12 inches behind cleat line, and as high as possible onto curb flashing. Rivet upper flashing tabs to sidewall flashing.

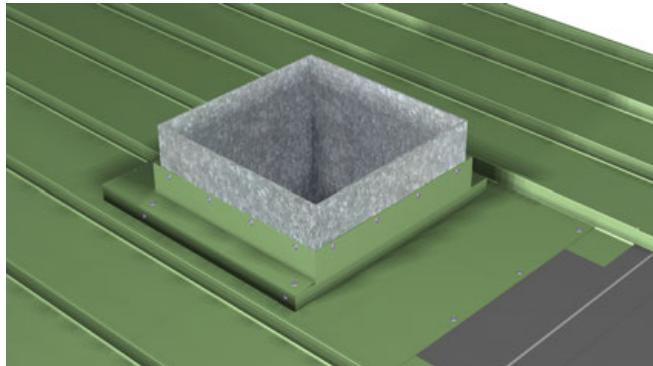

10. Run butyl tape and attach cleat to roof approximately 10" above the penetration, on top of the flashing. Fasten with clip screws every 12 inches.

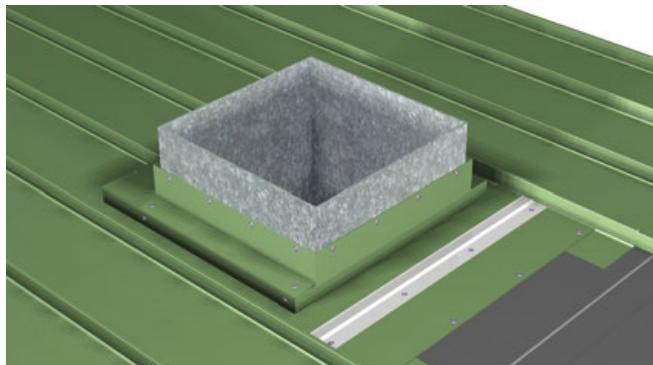

11. Fit and hem roof panels above the penetration. Clip panels onto the cleat. Do NOT caulk between panel and cleat.

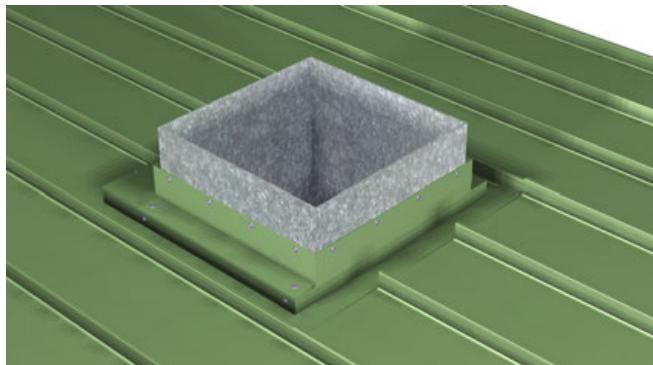

# PRELIMINARY INSTALLATION GUIDE


## Square Penetration:

12. Completed flashing for square penetration.

## NOTE:


If roof unit does not cover flashing:

Additional flashing may be required around penetration. Top unit must cover flashing.

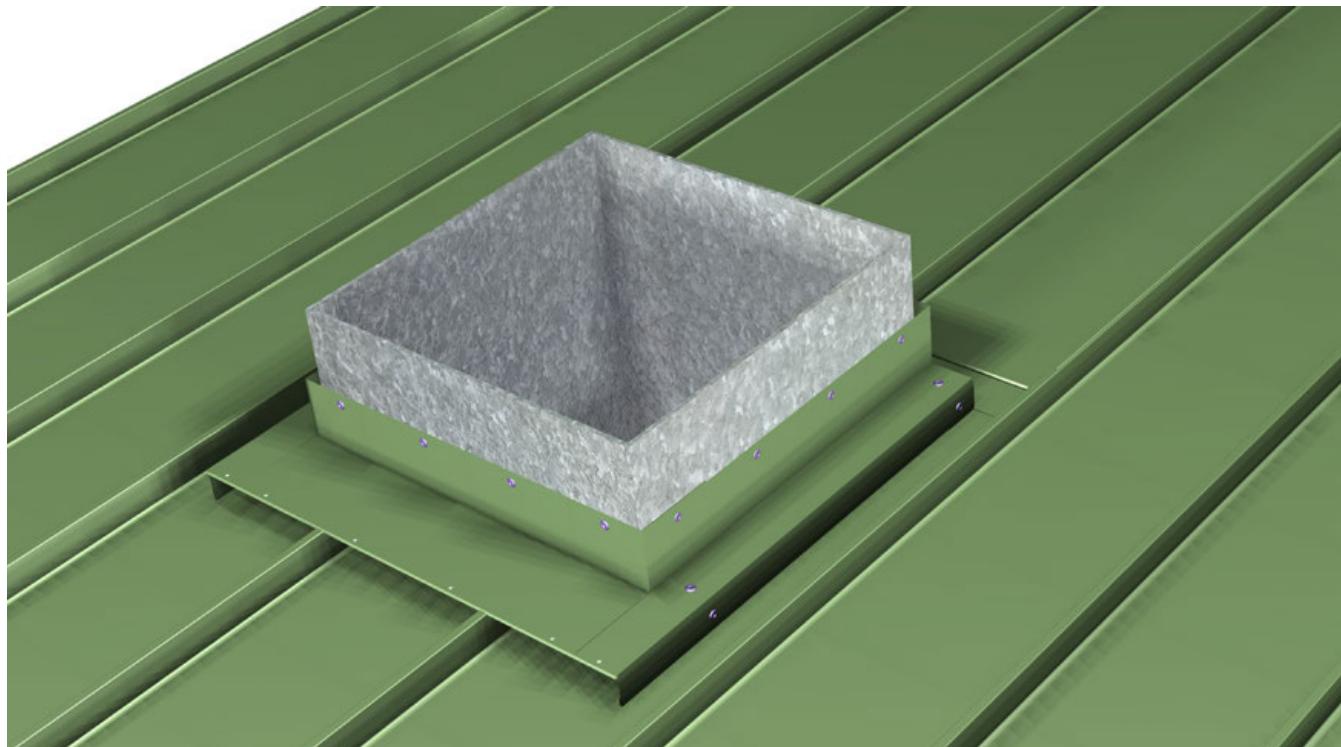

**FV:** Field-verify height to fit under roof unit.

13. If standard dimensions are used, counter-flashing may be required to fit under unit. Field-verify all front, side and rear flashing, and adjust dimensions for your specific installation.

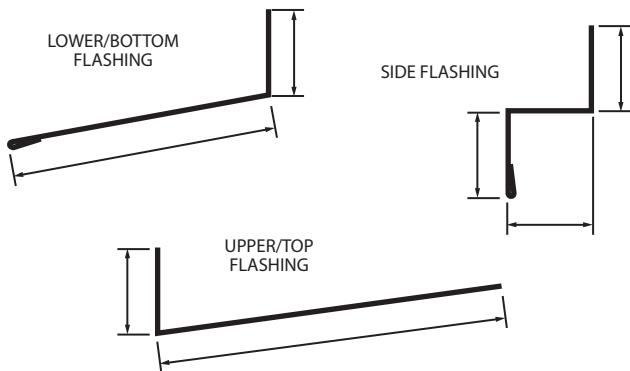





**Metal Panels Inc.**  
14921 East Pine St.  
Tulsa, Oklahoma 74116

( 918) 641- 0641 Voice  
(918) 641-0640 Fax

[www.metalpanelsinc.com](http://www.metalpanelsinc.com)

Tulsa, Oklahoma • Kansas City, Kansas