

# PRODUCT INFORMATION

Kansas City: 8341 Ruby Ave. Kansas City, KS 66111

913-766-7200


855-818-4958 toll-free 913-766-7201 fax Tulsa:

131 S. 147th E. Ave. Tulsa, OK 74116

918-641-0641

866-674-7657 toll-free 918-641-0640 fax

## STRONG SEAM 7/8 CORRUGATED (WALL)

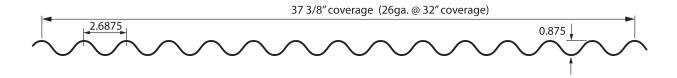

### 7/8" Corrugated Wall Panel

### ALLOWABLE UNIFORM LOADS IN POUNDS PER SQUARE FOOT

SPAN	,, ,	5 ksi SPAN IN FEET						
TYPE	LOAD TYPE	3.0	4.0	5.0	6.0	7.0	8.0	9.0
1-span	NEGATIVE WIND LOAD	158.15	88.96	56.94	39.54	28.98	19.42	13.64
	LIVE LOAD/DEFLECTION	158.15	88.96	56.94	39.54	28.98	19.42	13.64
2-span	NEGATIVE WIND LOAD	155.46	88.10	56.58	39.37	28.96	22.19	17.54
	LIVE LOAD/DEFLECTION	155.46	88.10	56.58	39.37	28.96	22.19	17.54
3-span	NEGATIVE WIND LOAD	192.89	109.66	70.53	49.11	36.14	27.70	21.90
	LIVE LOAD/DEFLECTION	192.89	109.66	70.53	49.11	36.14	27.70	21.90
4-span	NEGATIVE WIND LOAD	180.50	102.50	65.89	45.87	33.75	25.87	20.45
	LIVE LOAD/DEFLECTION	180.50	102.50	65.89	45.87	33.75	25.87	20.45

24 Gauge (0.0223"), Fy = 50 ksi, Fu = 60 ksi									
SPAN	LOAD TYPE	SPAN IN FEET							
TYPE	LOADTIFE	3.0	4.0	5.0	6.0	7.0	8.0	9.0	
1-span	NEGATIVE WIND LOAD	161.82	91.03	58.26	40.46	29.72	22.76	16.82	
	LIVE LOAD/DEFLECTION	161.82	91.03	58.26	40.46	29.72	22.76	16.82	
2-span	NEGATIVE WIND LOAD	159.03	90.13	57.89	40.28	29.63	22.70	17.95	
	LIVE LOAD/DEFLECTION	159.03	90.13	57.89	40.28	29.63	22.70	17.95	
3-span	NEGATIVE WIND LOAD	197.31	112.18	72.16	50.25	36.98	28.34	22.41	
	LIVE LOAD/DEFLECTION	197.31	112.18	72.16	50.25	36.98	28.34	22.41	
4-span	NEGATIVE WIND LOAD	184.64	104.86	67.42	46.93	34.53	26.46	20.92	
	LIVE LOAD/DEFLECTION	184.64	104.86	67.42	46.93	34.53	26.46	20.92	

22 Gauge (0	.0286"), Fy = 50 ksi, Fu = 60 ksi								
SPAN	LOAD TYPE	SPAN IN FEET							
TYPE		3.0	4.0	5.0	6.0	7.0	8.0	9.0	
1-span	NEGATIVE WIND LOAD	206.48	116.15	74.33	51.62	37.93	29.04	21.62	
	LIVE LOAD/DEFLECTION	206.48	116.15	74.33	51.62	37.93	29.04	21.62	
2-span	NEGATIVE WIND LOAD	202.85	114.99	73.86	51.39	37.80	28.96	22.90	
	LIVE LOAD/DEFLECTION	202.85	114.99	73.86	51.39	37.80	28.96	22.90	
3-span	NEGATIVE WIND LOAD	251.65	143.11	92.06	64.11	47.18	36.16	28.60	
	LIVE LOAD/DEFLECTION	251.65	143.11	92.06	64.11	47.18	36.16	28.60	
4-span	NEGATIVE WIND LOAD	235.50	133.77	86.01	59.88	44.06	33.77	26.70	
	LIVE LOAD/DEFLECTION	235.50	133.77	86.01	59.88	44.06	33.77	26.70	

#### Notes:

- 1. Strength calculations based on the 2012 AISI Standard "North American Cold-formed Steel Structural Members."
- 2. Allowable loads are applicable for uniform loading and spans without overhangs.
- 3. LIVE LOAD/DEFLECTION load capacities are for those loads that push the panel against its supports. The applicable limit states are flexure, shear, combined shear and flexure, web crippling at end and interior supports, and a deflection limit of L/60 under strength-level loads.
- 4. NEGATIVE WIND LOAD capacities are for those loads that pull the panel away from its supports. The applicable limit states are flexure, shear, combined shear and flexure, and a deflection limit of L/60 under 10-year wind loading.
- Panel pullover and Screw pullout capacity must be checked separately using the screws employed for each particular application when utilizing this load chart.

- 6. Effective yield strength has been determined in accordance with section A2.3.2 of the 2012 NAS specification.
- 7. The use of any accessories other than those provided by the manufacturer may damage panels, void all warranties and will void all engineering data.
- 8. This material is subject to change without notice. Please contact MPI for most current data.

The Engineering data contained herein is for the expressed use of customers and design professionals. Along with this data, it is recommended that the design professional have a copy of the most current version of the North American Specification for the Design of Cold-Formed Steel Structural Members published by the American Iron and Steel Institute to facilitate design. This Specification contains the design criteria for cold-formed steel components. Along with the Specification, the designer should reference the most current building code applicable to the project jobsite in order to determine environmental loads. If further information or guidance regarding cold-formed design practices is desired, please contact the manufacturer.